









E) Round 6-pin type	F) Flat straight type	FB) Flat L-shape (cable outlet is back)	FR) Flat L-shape (cable outlet is right)	FL) Flat L-shape (cable outlet is left)	G) Flat straight water-proof type	SA) Water-proof straight model with output button	SF) Straight standard type
USB-ITN-E 06AFM380E	USB-ITN-F 06AFM380F	No applicable models USB-ITN-F is available.			USB-ITN-G 06AFM380G	USB-ITN-SA 06AGQ001A	USB-ITN-SF 06AGQ001F
E) Round 6-pin type	F) Flat straight type	FB) Flat L-shape (cable outlet is back)	FR) Flat L-shape (cable outlet is right)	FL) Flat L-shape (cable outlet is left)	G) Flat straight water-proof type	SA) Water-proof straight model with output button	SF) Straight standard type
937387	905338	905689	905691	905693	21EAA194	06AGL111	06AGL011
965013	905409	905690	905692	905694	21EAA190	06AGL121	06AGL021
E) Round 6-pin type	F) Flat straight type	FB) Flat L-shape (cable outlet is back)	FR) Flat L-shape (cable outlet is right)	FL) Flat L-shape (cable outlet is left)	G) Flat straight water-proof type	SA) Water-proof straight model with output button	SF) Straight standard type
02AZD790E	02AZD790F	No applicable models Use 02AZD790F or 02AZE140F .			02AZD790G	No applicable models	02AZG011
02AZE140E	02AZE140F				02AZE140G		02AZG021


Note 1: **USB-ITN** is required to use in the combination with **USB-ITPAK**, when connected to D) **ID-F**, D) digital Mu-checker, **EB**, **EC-101D**, and F) **ID-U**, **ID-SS**, **ID-SX**.

Note 2: **USB-ITN**, **IT-020U**, and **U-WAVE-T** cannot be used with D) **EF/EH** and D) **VL-B/S-B**.

Note 3: **USB-ITN** and **U-WAVE-T** cannot be used with D) **SJ-500/SV-2100**.

Note 4: **IT-020U** and **USB-ITN-SF** cannot be used with D) **SJ-210** and D) **EB**.

E) Round 6-pin type	F) Flat straight type	FB) Flat L-shape (cable outlet is back)	FR) Flat L-shape (cable outlet is right)	FL) Flat L-shape (cable outlet is left)	G) Flat straight water-proof type	SA) Water-proof straight model with output button	SF) Straight standard type
							
N/A	N/A	N/A	N/A	N/A	N/A	Available	N/A

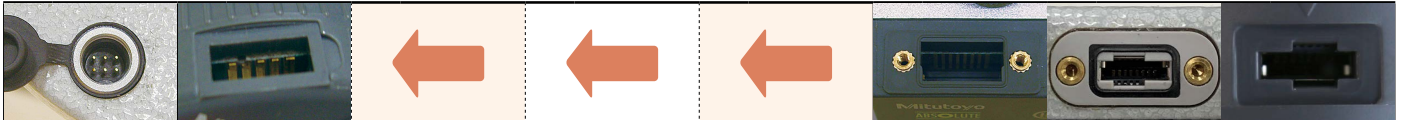

[Hardness testing machines] HM-102 HM-103 HM-320 HM-430 HM-411	<ul style="list-style-type: none"> • Digimatic indicator ID-CX, ID-C112AX, ID-C112RXB, ID-C112GXB, ID-U (Note 1), ID-SS (Note 1), ID-SX (Note 1) HDM-AX, HD-AX, HDS-HC, HDS-C • ABS borematic 568-361/568-362, etc. • Scale unit SD-E, SDV-E, SD-F, SDV-F 	<ul style="list-style-type: none"> • Digimatic bore gage 511-501/511-502, etc. • Hardness testing machines HH-300 	<ul style="list-style-type: none"> • Digimatic depth gage Digimatic type (ID-CX) 	<ul style="list-style-type: none"> • Digimatic indicator ID-N, ID-B 	<ul style="list-style-type: none"> • Digimatic micrometer QuantuMike (293-14X-40/293-18X-40) 	<ul style="list-style-type: none"> • Digimatic indicator ID-CNX, ID-FNX • Digimatic depth gage Digimatic type (ID-CNX) • Digimatic thickness gage Digimatic type (ID-CNX)
--	---	---	--	--	--	--

[How to check the code No. of the connecting cable used for the measuring instrument]

- For models currently being sold
Please check the optional accessories for the applicable Digimatic gage in the general catalog.
The general catalog can also be viewed on the Mitutoyo website. Web address: <https://www.mitutoyo.co.jp/>
- Regarding discontinued models not listed in the general catalog
(1) How to look for items from the general catalog
For a digimatic indicator, you can check the "New and Old Product Compatibility Table" for compatible connecting cables.
(2) How to look for items from the Mitutoyo website
You can search the "Parts List". Enter the code number of the Digimatic gage you want to search for.
Example: **293-421**, **500-151**, etc.